


Installation and Operation manual

For TCP/IP With 280 System

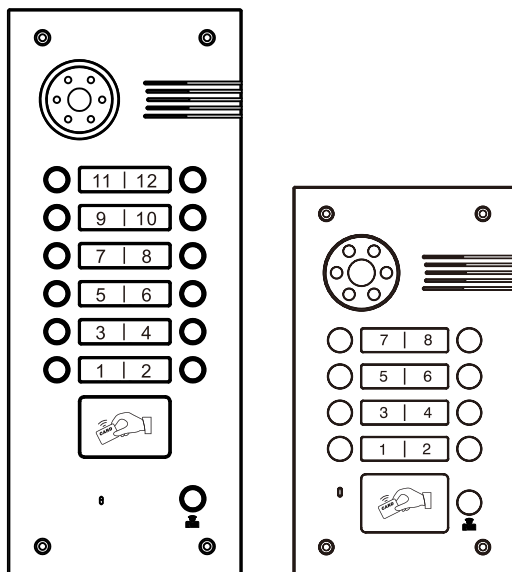

Outdoor Panel

■ Remark

Please follow the user manual for correct installation and testing. If there is any doubt please call our tech-supporting and customer center.

Our company applies ourselves to reformation and innovation of our products. No extra notice for any change. The illustration shown here is only for reference. If there is any difference, please take the actual product as the standard.

The product and batteries must be handled separately from household waste. When the product reaches the end of service life and needs to be discarded, please contact the local administrative department and put it in the designated collection points in order to avoid the damage to the environment and human health caused by any disposal. We encourage recycling and reusing the material resources.

CATALOG

Product description	1
Product appearance	1
Basic function	3
Product executive standard	3
Technical parameter	3
Package contents	4
Basic operation	4
WEB settings	5
System connection diagram	12
Wiring diagram of outdoor panel	13
Installation instructions	15
Troubleshooting	17
Safety & Precautions	18


Product description

Application: 280D is outdoor panel based on TCP/IP communication protocol, supporting digital video intercom and SIP communication protocol.


Operating system: Linux

Product appearance


Model: D-A5

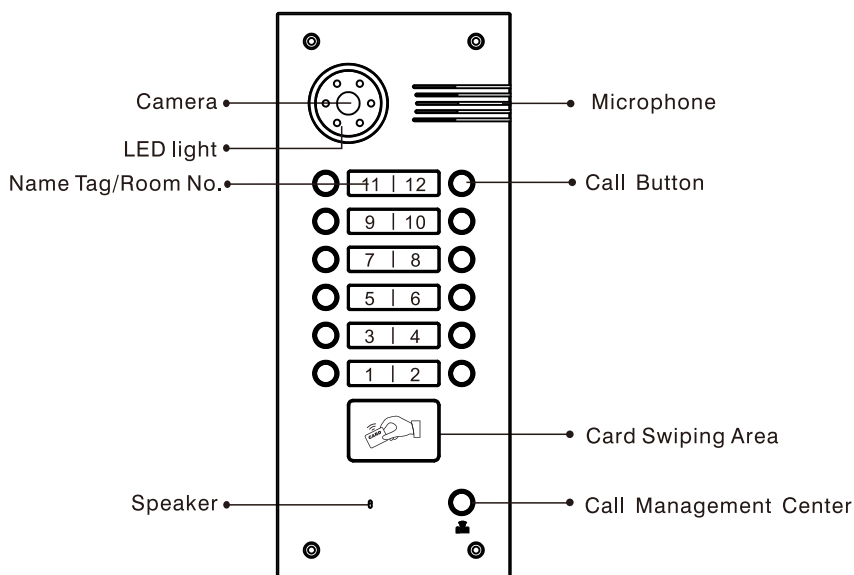

Model: D-A6(With 8 Buttons)

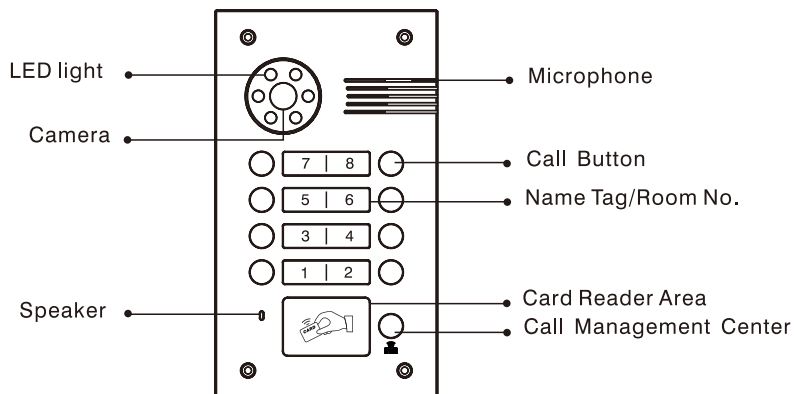

Model: D-A6(With 4 Buttons)

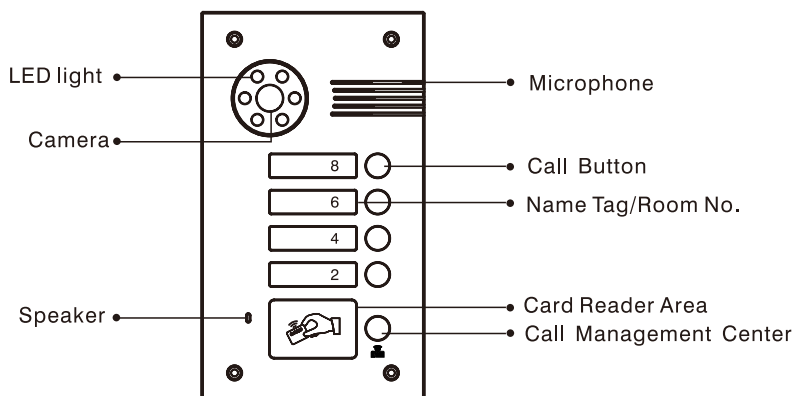

Notes:

Call Button and Name Tag/Room No. can be customized according to actual needs. Up to 2x4 units can be configured.

Basic function

- ◇ Call indoor monitor or management center;
- ◇ Support IC/ID access control card (ID card optional) ;
- ◇ IC/ID card information can be registered on outdoor panel. Registration information of max. 100,000 IC/ID cards can be stored (ID card optional) ;
- ◇ Support unlocking by Exit button and door magnetic detection;
- ◇ Support LED light for night vision;
- ◇ Support POE power supply(optional).

 
Product executive standard

- ◇ GB 18239-2000 "General specification for integrated circuit (IC) card reader"
- ◇ GA/T 394-2002 "Technical requirements for access control system"


Technical parameter

- ◇ **Working voltage:** DC12V
- ◇ **Rated power:** 3W
- ◇ **Standby power:** 1.5W
- ◇ **Camera pixels:** 1280x720
- ◇ **Working temperature:** -40~+70℃
- ◇ **Storage temperature:** -10~+70℃
- ◇ **Storage relative humidity:** 20%~93%
- ◇ **CPU frequency:** 1GHz


Package contents




Screw

 

Expansion tube

 

Seal Ring

 

Screw Wrench

Basic operation

1. Call indoor monitor

In standby mode, press the call button on outdoor panel to call indoor monitor. If the call fails or indoor monitor is busy, outdoor panel will emit a beep.

2. Unlocking by IC/ID card

Put the registered IC/ID card(ID card optional) on card reader area of the outdoor panel. If successful, the door will be unlocked.

WEB settings

Connect outdoor panel to PC through the switch. Input IP address of outdoor panel in the web browser of PC (The IP addresses of PC and outdoor panel must be on the same network segment. Default IP address is 192.168.68.90), then input user name and password (default user name is "admin" and the password is "123456") to enter into the following interface:



1.Network Settings

Click the icon "Network" on the left side to enter the interface as shown below:



DHCP: dynamic IP function.

IP address: for the same system on the same network segment, IP address can not be repeated.

Subnet mask: the original subnet mask is 255.255.255.0, which normally doesn't need to be changed.

Default gateway: fill in according to the IP network allocation of project site.

DNS: it refers to IP address of the DNS server.

Server IP: it refers to IP address of digital management software installed in the management computer.

Access password: IP access password for management software

Normally, management center, indoor monitor and outdoor panel are in the same LAN for communication; if they are not in the same LAN, the call can be realized on the internet; in this case, SIP server needs to be set.

After the setup is completed, click the icon "Submit" to enable the settings.

2. Device Settings



Streaming Media Solution

Device Settings

BuildNo:

UnitNo:

RoomNo:

No:

Password:

Mode:

Ringing:

Timeout:

Language:

Volume:

Video:

Bitrate:

Forward:

Building No. and Unit No. are the ones where outdoor panel is located.

The No. can be set from 1 to 12. Device No. is mainly used for distinguishing the outdoor panel when it is watched by indoor monitor.

Password refers to the one used in your login to the web for outdoor panel settings (default password is 123456).

Outdoor Panel Mode: Person Panel (Outdoor Panel)

Language selection: only support simplified Chinese and English.

System volume: adjust the system volume with 6 level for selection.

Video size: 320x240, 640x480 or 1280x720.

Call forwarding: the call can be made one by one or simultaneously.

After the setup is completed, click the icon "Submit" to enable the settings.

3.Access Settings

Click the icon "Access" on the left side to enter the interface as shown below:



Unlock Timeout is used for controlling the unlocking time ranging from 1 to 9s.

Unlock Delay refers to the delayed opening time ranging from 0 to 9 seconds.

Elev refer is used for setting the floor of outdoor panel ranging from 01 to 99.

Security ON/OFF: arming/disarming by card is only effective for secondary outdoor panel; unit panel only supports disarming by card.

Unlock Passwd: it's used for unlocking the door. The system default is 0000. Eight unlocking passwords can be added.(This is only applicable for outdoor panel with keypad.)

Card registration

The Admin Card is used for registering user card. There are two ways of registering the admin card:

1. The user enters card No. of the admin card in the box after "Admin Card" and then click the key "Submit". In this case, the admin card is registered successfully.
2. If the user isn't aware of admin card No., please enter 0 in the box first and click the key "Submit". Then place the admin card close to the swiping area. When the system gives an indication tone, it means that the admin card is registered successfully.

Then register the user card. The user shall swipe the admin card first. The system emits a beep. Then place the card to be registered near the swiping area within 10 seconds. When the system gives an indication tone, it means that the user card is registered successfully. When registering the user card, the card to be registered shall be swiped 10 seconds after the admin card is swiped. Once a user card is registered, it will postpone for 10 seconds. When there is no activity for 10 seconds, the system will exit from registration status automatically. To register a new user card, the user shall swipe the admin card again.

4.SIP Settings

Click the icon "VOIP" on the left side to enter into the following interface:

Streaming Media Solution

SIP Settings

Enable: ☐

Proxy:

Realm:

User:

Password:

H.264:

STUN IP:

STUN Port:

Proxy: URL of SIP proxy server in format: sip:ip or sip:domain name.

Realm: realm of the device, usually the same as IP or domain name.

User name: it refers to the name of the SIP proxy server, provided by the SIP proxy server administrator.

Password: the password to access the SIP proxy server, provided by the SIP proxy server administrator.

STUN IP and Port refer to the IP and port of public server for NAT traversal of audio and video.

Once this is set up, click the key "Submit" to enable new settings.

5.Call Forwarding

Click the icon "Forward" on the left side of the page to enter the interface as shown below:

Streaming Media Solution

Forward Account Settings

RoomNo:

Account:

Delete:

RoomNo	Account
RoomNo	Account
RoomNo	Account
RoomNo	Account

The room number can be bound with the telephone number. When a visitor calls but there is no answer within 25 seconds, the system will automatically forward the call to the phone. Specific steps are as follows:

1. Enter the room number first, then enter the phone number you want to bind;
2. To delete this account, check the box;
3. Once this is set up, click the key "Submit" to enable new settings.

(**Note:** This item requires support of extension module or local SIP service provider.)

6.Advanced Settings

Click the icon "Advanced" on the left side of the page to enter the interface as shown below:



Quick Call: Check the box to enable this function. It refers to the call to management center. Enter the SIP address of specified management center device in the box after URL. The device can be indoor monitor or SIP phone of other manufacturers.

Check the box of Voice GW to enable voice gateway. The settings are as follows:

1. Connect LAN port of voice module to the computer through the switch, set the computer's IP address to 192.168.2.*, open IE browser, and enter http: //192.168.2.1 and default password "admin" to the setup interface;

2. According to the situation of used internet, assign appropriate IP address to WAN port of voice module (IP of WAN port cannot be on the same network segment as the one of LAN port. If WAN port is set to 192.168.2.*, the gateway of LAN port will be adjusted automatically rather than 192.168.2.1). Enable the access permission of WAN port and click "Apply".

3. FXO port settings: set the SIP user ID of the port, set DTMF mode to RFC2833 and click "Apply".

4. IP address of WAN port for voice gateway is the one of URL for system development module of outdoor panel. The final port No. is default port of the system. The format of URL bar is: [SIP user ID of FXS port] @ [IP of WAN Port]: 5062.

5. Once this is set up, click "Submit" to enable new settings.

Speed Dial: press a number key to call directly(**Important:** Check the box to enable this function).(The floor No. of indoor monitor should be set as 0, and the Room No. should be set from 1-12 according to button type);

ONU Pass: check out ONU settings;

4G Dongle: check the box to enable 4G Internet;

RTSP Feed: check the box to bind media address of third-party video network management.

Once this is set up, click "Submit" to enable new settings.

7.Other Settings

Click the icon "Others" on the left side of the page to enter the interface as shown below:




Click Reboot to restart the system.

8. Logout


Click the icon "Logout" on the left side. In next page, click the icon "Submit" to log out the system.



System connection diagram

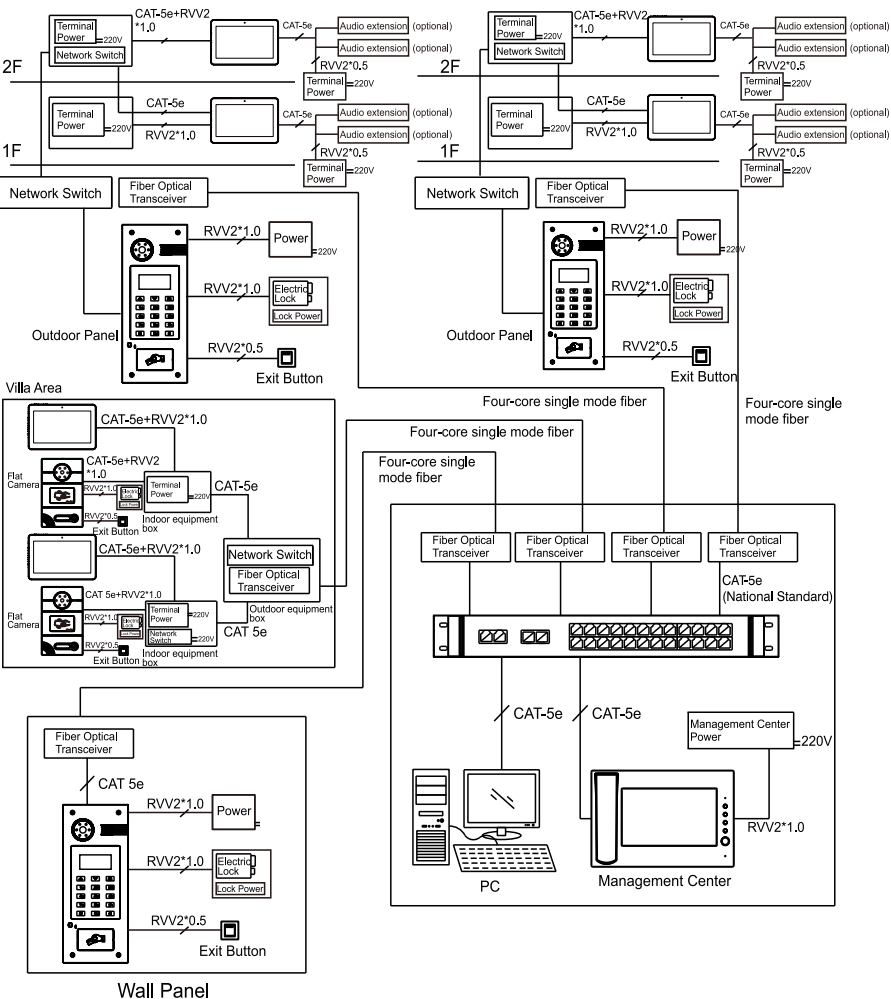


Wiring diagram of outdoor panel

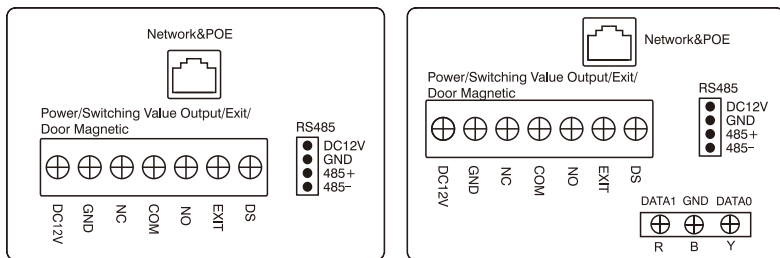

Optional

1. RS485 interface

It can connect to the equipment with RS485 interface. RS485 interface can output 12V/100mA power. Connection of +12V isn't required if it is unused.

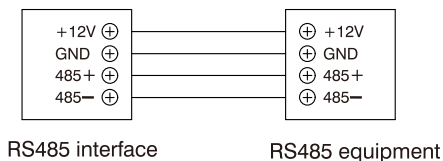


RS485 interface

RS485 equipment

2. Exit Button/Door Magnetic

Connect with Exit button and door sensor.

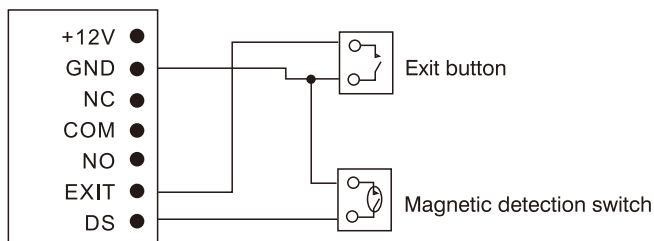


Exit Button/Door Magnetic

3. Power/Switching Value Output


Connect power interface of outdoor panel to 12V DC power;

Connect switching value output with electric lock. Independent power supply is required for the lock.

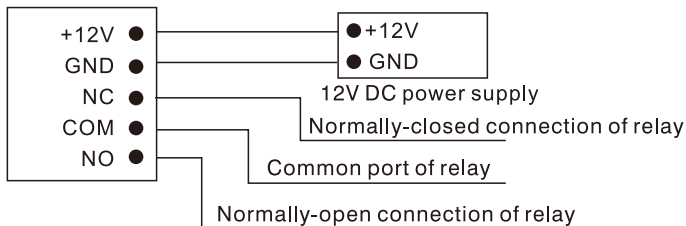


4. Network Interface

Connect to management center, indoor monitor or other network device through network switch.

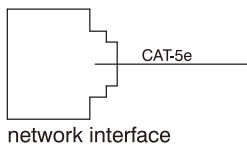



5. Wiegand interface

Wiegand output interface: connect to card reader through the wiegand interface.


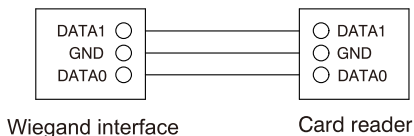


Installation instructions

Model: A5

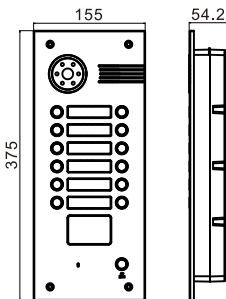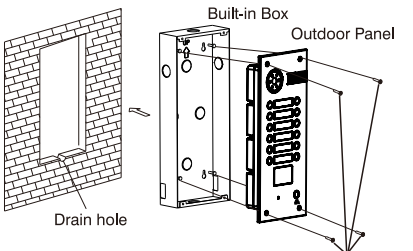Appearance size	Installation diagram
 <p>Product size: 375*155*54.2mm Built-in box size: 350*139*53.2mm Trepanning size: 355*143*60mm</p>	 <p>4PCS screws to fix the outdoor panel on built-in box.</p>


Model: A6

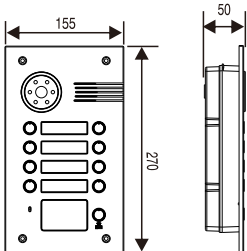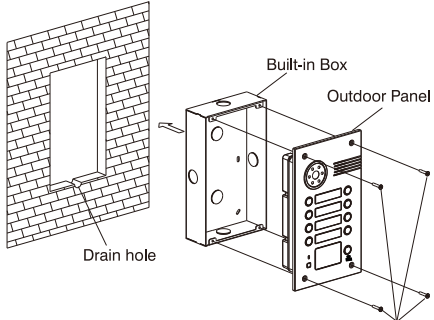Appearance size	Installation diagram
 <p>Product size: 270*155*50mm Built-in box size: 142*245*55mm Trepanning size: 146*250*60mm</p>	 <p>4PCS screws to fix the outdoor panel on built-in box.</p>

Installation method:

1. According to the installation dimension of outdoor panel, dig a square groove at the appropriate position in the wall or door, and dig a hole (drainage hole) at the bottom;
2. Open the threading holes at the bottom of the built-in box to facilitate drainage. Upward arrow is on the front of the built-in box. Embed the built-in box into the wall, then put the built-in box into the groove of the wall, and tighten four screws from top to bottom of the built-in box, or fix the built-in box in the wall with concrete;
3. Assemble the outdoor panel into the built-in box, align the groove and the built-in box, tighten the screws, and finally inject the glass glue into the top, left and right sides of the outdoor panel (note: the glass glue cannot be injected into the bottom part that is reserved for the drainage hole at the bottom of outdoor panel).

Installation Instructions:

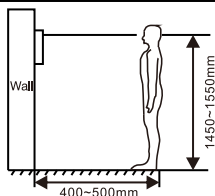

[Suggestion]: During the installation, the camera should be 1450~1550mm above the ground. The camera tether for photographing human face should be the top priority.

Troubleshooting

Some common failures and troubleshooting methods are listed for your reference. In case of failure which cannot be repaired, do not disassemble or repair the product by yourself. Please contact the after-sales service department.

When outdoor panel fails to call indoor monitor:

- a. When setting villa outdoor panel, please make sure building No. and unit No. of outdoor panel is the same as the ones of indoor monitor;
- b. Please check whether the network is connected;
- c. Please check if there are any security settings for the network, such as VLAN configuration;
- d. Indoor monitor cannot be set as sub device only. Main device is required.

Safety & Precautions

Safety & Precautions

To protect you and others from harm or protect your device from damage, please read the following information before using your device.

Do not install equipment in the following areas:

- Do not install equipment in high temperature, humidity, near the magnetic field, such as generators, transformers or magnets, etc.
- Do not place the equipment near the heating items such as the electric heater or the liquid container.
- Do not place the device directly in the sun or near the heat source, which may cause the body to be discolored or deformed.
- Do not install the equipment in an unstable position to avoid the property losses or personal injury caused by the falling of device.

Prevent electric shock, fire and explosion

- Do not use damaged power cord, plug or loose power outlet.
- Do not touch the power cord with wet hands or unplug the power source by pulling the power supply.
- Do not bend or damage the power cord.
- Do not touch the equipment with wet hands.
- Do not let the power slide, or cause a collision.
- Do not use power supply without manufacturer approval.
- Do not splash water or other liquids into the equipment.

Clean fuselage surface

- Use a soft cloth dipped in a small amount of water to clean the surface of the machine and dry it with a dry cloth.

Other matters needing attention

- In order to prevent damage to the paint or shell, do not expose the device to chemical products, such as thinner, gasoline, alcohol, insect repellent, sunscreen, or pesticides, etc.
- Do not beat or hit the device with a hard object.
- Do not disassemble, refit or modify the device at your own discretion. The arbitrary modification is not covered under warranty. When any repair required, please contact the customer service center.
- When the device emits abnormal sound, smell or smoke, unplug the power immediately and contact the customer service center in time.
- If you do not use the device for a long time, it is recommended to unplug the power adapter, take out memory card and put the device in a dry environment.

