 


Wireless Digital Indoor Handset

User's Manual

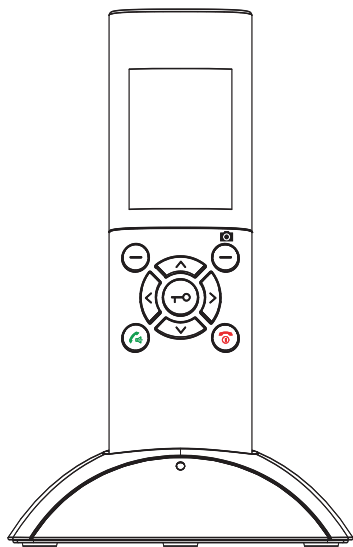

■ Remark


Please follow the user manual for correct installation and testing. If there is any doubt please call our tech-supporting and customer center.

Our company applies ourselves to reformation and innovation of our products. No extra notice for any change. The illustration shown here is only for reference. If there is any difference, please take the actual product as the standard.

CATALOG

Product Pictures	1
Product Features.....	1
Package Contents	2
Settings.....	2
Web settings.....	6
Operations.....	9
System Connection.....	10
Installing Batteries	10
Installation Instruction	11
Notes	12

 Product Pictures

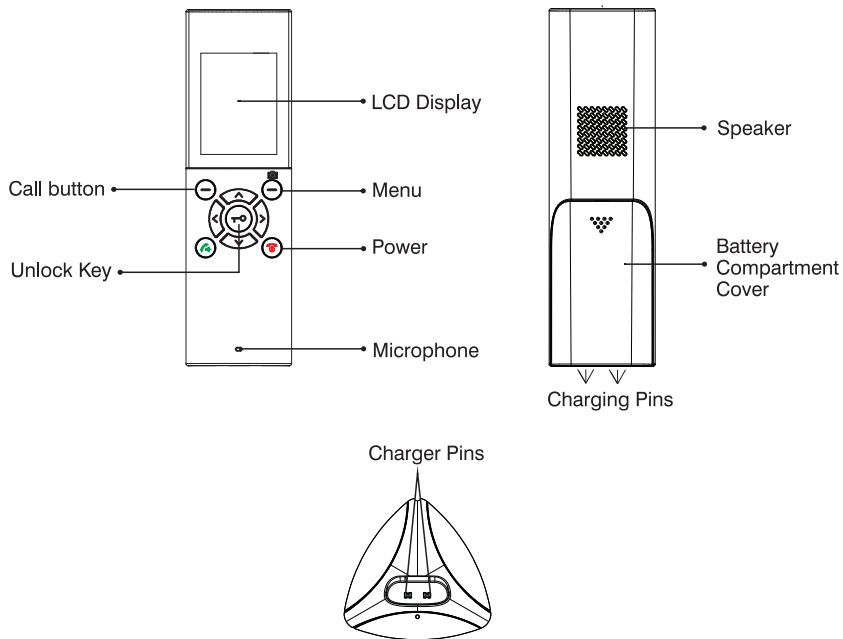


Product Features

- 2.4" TFT LCD display, Video resolution: 320x240
- Lithium battery power supply voltage: 3.7V~4.2V
- Connectivity: 802.11b/g/n Wi-Fi connection @ 2.4GHz
- Storage temperature: -10°C~+40°C
- Operating temperature: -10°C~+55°C
- Storage relative humidity: 20%~80%

Package Contents

 Once you have unpacked your product, make sure that all the parts shown below are available. If any piece is missing or broken, please promptly call your dealer.

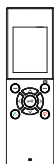

Indoor Handset



Lithium Battery



Charger Base



Power Adapter
(12V, 500mA)


Settings

1. Turning On/ Off

To turn on/off the indoor handset, press and hold .

 
Powering on the indoor handset, the system will enter into the following interface:



 
Note: When the battery power of indoor handset is insufficient, it will display an indication icon  and warning tone. The indoor handset will automatically turn off. You need to charge it.

2. Menu



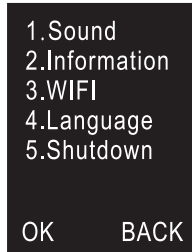



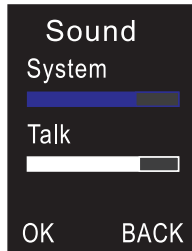

Press  to select the **Menu**, then the system will enter into the following interface:



 
3. Sound



This function allows you to adjust the Sound (5 levels optional) during a call.

1. Press **Up**  or **Down**  to choose "Sound" menu.
2. Press **Left**  or **Right**  to select the volume that you like. Each time you press **Left**  or **Right** , the indoor handset sounds with the selected volume.
3. Press  **OK** to save the settings and press  **BACK** to return to the previous

4. Information

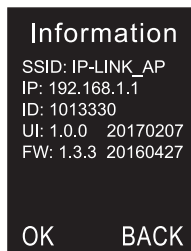

This function allows you to look up the Information of you indoor handset .

 
Press **⏮BACK** to return to the previous menu.

SSID: The name of the WIFI hotspot (the default is “wrong”).

IP: The address for you to set the indoor handset.

ID: The number of the indoor handset(the room number).

5. WIFI

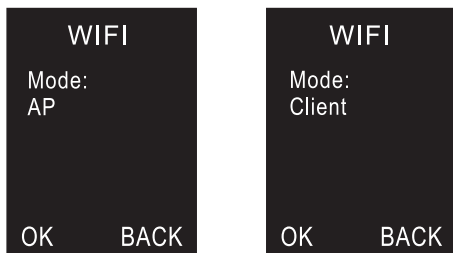

This function allows you to change the WIFI of indoor handset (There are two patterns for your selection).

Press **Right** **➡** or **Left** **⬅** to change the patterns.

If you set the WIFI as the Client model, and the handset is connected to the Wifi hotspot, the WIFI icon will show as the first picture below.

If the indoor handset isn't connected to the Wifi hotspot, it will show as the second picture.

If you set the WIFI as the AP model, it will show as the last picture.



connection



disconnected



AP model

6. Language



This function allows you to change the language of indoor handset (There are three languages for your selection).

Press **Up** (▲) or **Down** (▼) to choose “language” menu, then press (⊖) OK to **Select**.

7. Shutdown



Press **Up** (▲) or **Down** (▼) to choose Reboot or Shutdown, then Press (⊖) OK to notarize.

Web Setting

Press the **Menu** button, select WIFI, make the model as AP and press **OK** to save the settings, After the icon shows as the following, use a mobile phone or a PC to connect the indoor handset's hotspot(the default SSID is WIFI-SIP-AP, the password is 12345678).

After connection, use your mobile phone or PC to access a webpage (the default IP address is 192.168.1.1), and then input the user and password.(the default user name is admin, the password is 123456).

Press login and enter the following interface, then you can set your indoor handset with the information.



1. Main



2. Network

Click "Network" icon on the interface to enter into the following interface:

In this interface, you can make the indoor handset connect to the wireless router (the indoor handset can only be connected to Wi-Fi work).

SSID:the name of your wireless router.

Password: the password of your wireless router.

Streaming Media Solution

Main
Network
RoomNo
VOIP
Contacts
Others
Logout

WiFi Settings

SSID: TP-LINK_B0D6
Password: 123456789
DHCP: ☒
IP: 192.168.1.93
Mask: 255.255.255.0
Gateway: 192.168.1.1
DNS: 8.8.8.8
NTP: 202.120.2.101

Submit

Click “Submit” icon to save the settings.

3. RoomNo

Click “RoomNo” icon to enter into the following interface:

Streaming Media Solution

Main
Network
RoomNo
VOIP
Contacts
Others
Logout

Room No Settings

Build: 1
Unit: 1
Floor: 11
Room: 14
Device: 0
Sync: 443495
Server: 192.168.68.1
Password: 123456

Submit

In this interface, you can set your indoor handset to connect with the room which you live in, so your neighbors can use the Room No. to call you. After successful setting, you can see the RoomNo shown in the Information_ID.

4. VOIP

Click “VOIP” icon to enter into the following interface:

Streaming Media Solution

Main
Network
RoomNo
VOIP
Contacts
Others
Logout

SIP Settings

Enable: ☒
Proxy: 192.168.68.1
Realm: 192.168.68.1
User: 100
Password: *****
H.264: 102
STUN IP: 192.168.68.1
STUN Port: 8080
Timeout: 300s

Submit

 
To connect with SIP phone, check “SIP Enable” and input the number registered in SIP server.

Timeout: Talking time settings.

Click “Submit” icon to save the settings.

5. Contacts

Click “Contacts” icon to enter into the following interface:

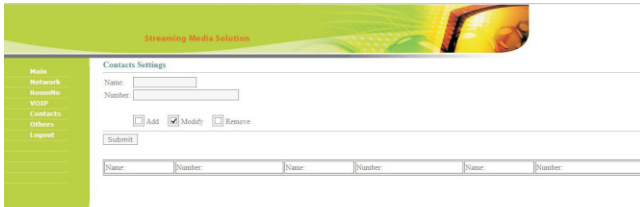

The screenshot shows the 'Contacts Settings' page. On the left is a green sidebar with a menu containing: Main, Network, Accounts, VOIP, Contacts (highlighted), Others, and Logout. The main content area has a header 'Streaming Media Solution' and a sub-header 'Contacts Settings'. Below this are input fields for 'Name' and 'Number'. There are three buttons: 'Add', 'Modify' (with a checked checkbox), and 'Remove'. A 'Submit' button is below these. At the bottom, there is a table with six columns, each labeled 'Name' and 'Number'.

 
In this interface, you can add someone's SIP number into your indoor handset. When you want to call them, you just need to press the **call** button and choose the number to call, just like using the mobile phone.

Of course, you can modify or remove the informations that is changed or you don't like.

Click “Submit” icon to save the settings.

6. Others

Click “Others” icon to enter into the following interface:

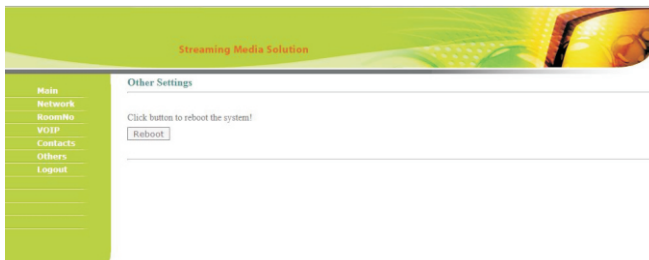


The screenshot shows the 'Other Settings' page. It has the same green sidebar as the previous interface, with 'Others' highlighted in the menu. The main content area has a header 'Streaming Media Solution' and a sub-header 'Other Settings'. Below this is a text label 'Click button to reboot the system!' and a 'Reboot' button.

Clicking "Reboot" icon, the system may reboot.

7. Logout

 Click "Logout" icon to enter into the following interface:

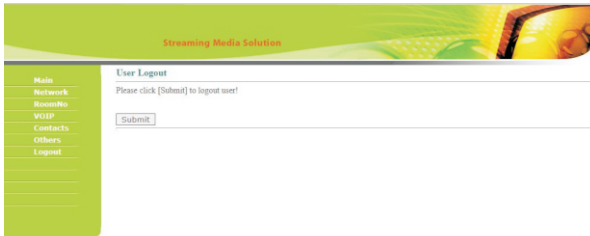


Clicking "Submit" icon, the system will log you out.

Notes:


After the setup is complete, change the indoor handset's WIFI mode to Client. Then the indoor handset will connect to the wireless router you had set unless the setup failed.

Operations

1. Calling

 
When the visitor presses the call button on outdoor camera, the indoor handset will ring and you can see the visitor through LCD display. Pressing **Answer**, the indoor handset will stop ringing and then the conversation will start. Press the button  or **Unlock**, the door can be open. Press the button **Hang up** to end the conversation.

2. Calling neighbors

If you want to call your neighbor by the indoor handset, press the button **call** to choose. There are some names you have ever added into your indoor handset just like the Contacts in the Web Settings. Choose the number and press the button  **Call**. In this way you can talk with your neighbor without going out.

System Connection


Simple system configuration

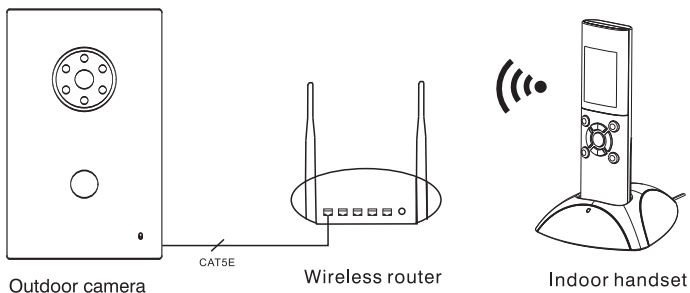

Installing Batteries

The rechargeable lithium battery (3.7V, 1100mA) comes with your indoor handset. Install the battery before use.

 1.

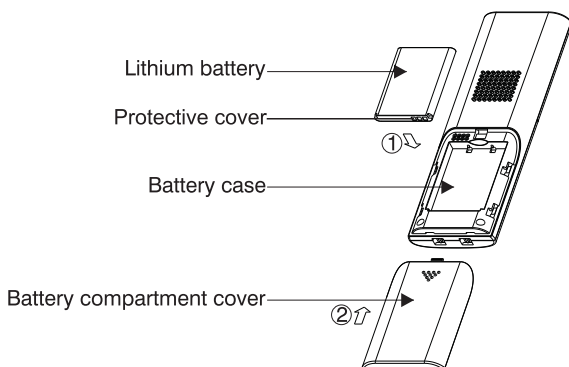


2. Insert new battery as indicated, matching correct polarity(+,-).
3. To replace the battery cover, slide the cover up until it snaps in place.

Notes:

1. To activate battery please remove protective cover from the battery prior to use.
2. The battery needs to be replaced if it doesn't recover its full storage capacities after recharging.
3. When replacing the battery, make sure using good quality re-chargeable lithium battery. Never use other battery or conventional alkaline battery.

 Installation Instruction

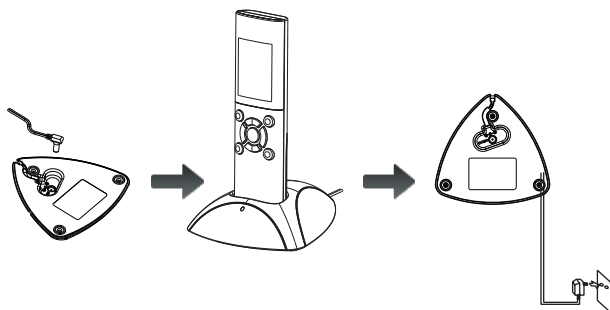

Connect the modular end of the AC power adapter to the power jack of the charger, then plug the AC adapter into a standard AC wall outlet.

Charging Indoor Handset

! Important Note: Before initial operation, **YOU SHOULD FULLY CHARGE THE INDOOR HANDSET** for about **5 hours**.

To charge the indoor handset, you should place it on the charger base.

Notes

Maintenance of devices

1. Keep the surface clean and use soft dry cloth to clean the dust of the product.
2. Please turn off the power of indoor handset when cleaning the indoor handset.
3. If there is stubborn stain which cannot be cleaned with dry cloth, please use the soft towel dipped in the neutral diluted detergent to clean the machine and then clear it with dry cloth.
4. Do not use benzene, thinner or organic solvents such as gasoline for cleaning, may cause damage to the machine casing or surface and change colors.

Matters need to be noticed

1. Read the instructions in this manual carefully. Be sure to keep it for future reference.
2. Be sure to use only the power adapter and power source which match the rating listed for them. If you are not sure, check with your dealer or with your local power company.
3. Avoid strong hits or shocks. Do not use the power adapter if it is has received any hard knocks or looks damaged in any way; please immediately contact an authorised service center.
4. The product should be placed where it is stable, windy, air-dry, non-sunshine, non strong magnetic and non dusty.
5. Don't clean the surface with chemicals but with soft and clean dry cloth.
6. Don't press several buttons at the same time.
7. The outdoor and indoor unit must be matched with appointed specified models and cannot match with others that are not our products.
8. Don't disassemble the machine without authorization. As for the need of fault repair, please contact the distributors or the company's tech-supporting department.

