



Wireless Digital Video Doorbell

User's Manual

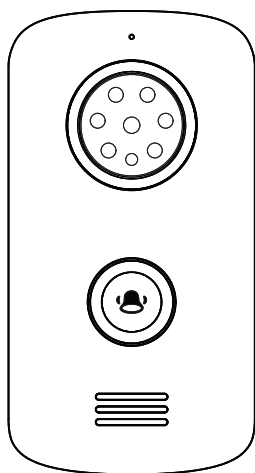

Door Camera

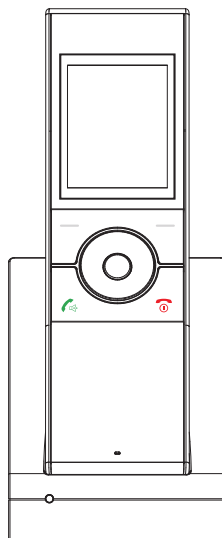

Indoor Handset

■ Remark

Please follow the user manual for correct installation and testing, if there is any doubt, please call our tech-supporting and customer center.

Our company applies ourselves to reformation and innovation of our products. No extra informing for any change. The illustration shown here only used for reference, if there is any difference please take the actual product as standard product.

The product and batteries must be handled separately from household waste. When the product reaches the end of service life and needs to be discarded, please contact the local administrative department and put it in the designated collection points in order to avoid the damage to the environment and human health caused by any disposal. We encourage recycling and reusing the material resources.

CATALOG

Product Features.....	1
Package Contents	2
Product Pictures	3
Installing Batteries	4
Installation Instruction	5
Diagram	6
Settings.....	8
Engineering Mode.....	16
Operations.....	18
Technical Parameters.....	20
Notes	22

 
Product Features

- 2.4" TFT LCD display
- Video resolution: 320x240, with 15 frames per second
- Wide angle lens and LED for night vision
- Long standby door camera (battery or DC 12V)
- Waterproof door camera Ip55
- Microphone and speakerphone
- Basic video intercom, monitoring, remote unlock and anti-dismantle alarm feature
- Brightness and talk volume are adjustable
- Supports up to 2 door cameras and 2 indoor handsets
- Transmitting distance: with up to 500m in open area
- DIY installation to save labor cost

Package Contents

Once you have unpacked your product, make sure that all the parts shown below are available. If any pieces are missing or broken, please promptly call you dealer.

Parts of door camera




Door Camera



Battery Cover



 
Cable Cover



Bracket



 Screws



Screw Wrench



User's Manual

Parts of indoor handset



 
Indoor Handset



Lithium Battery




Charger Base




Power Adapter
(12V, 500mA)

Product Pictures

Door Camera

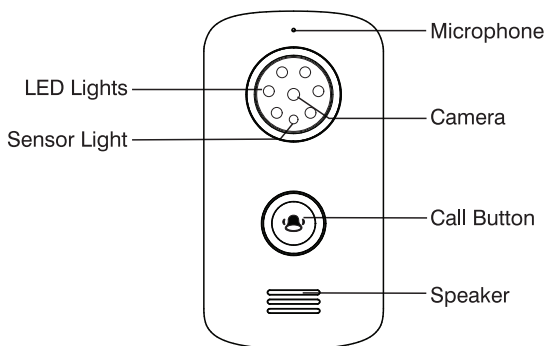


Indoor Handset

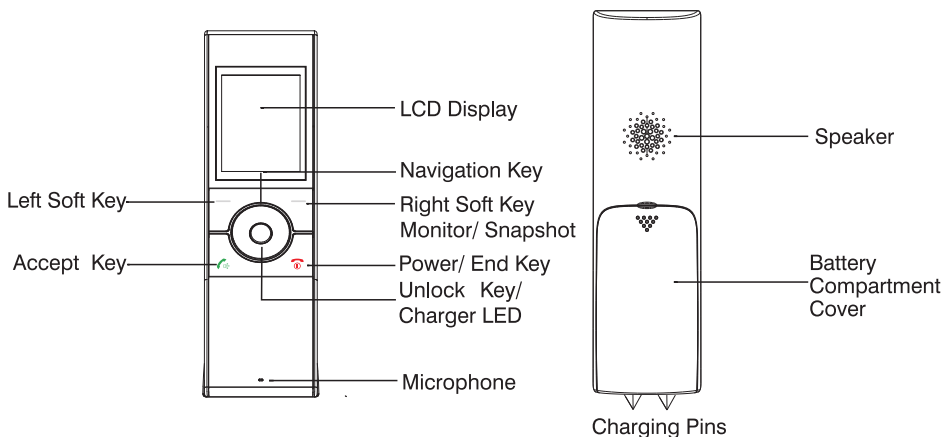

Charger

Charge Pins

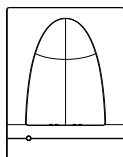


Installing Batteries

Indoor Handset

The rechargeable lithium battery (3.7V, 1100mA) come with your indoor handset. Install the battery before use.

1.

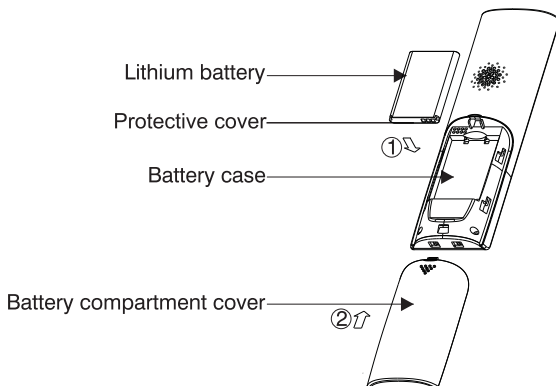

2. Insert new battery as indicated, matching correct polarity(+,-).

3. To replace the battery cover, slide the cover up until it snaps in place.

Notes:


1. To activate battery please remove protective cover from the battery prior to use.

2. The battery need to be replaced if they do not recover their full storage capacities after recharging.

3. When replacing the battery, make sure using good quality re-chargeable lithium battery. Never use other battery or conventional alkaline battery.


Door Camera

1. Install two C size 1.5V batteries (not supplied) into the battery compartment or connect with DC 12V power adapter to turn on the door camera.
2. Drill four screws to fix the battery cover up.

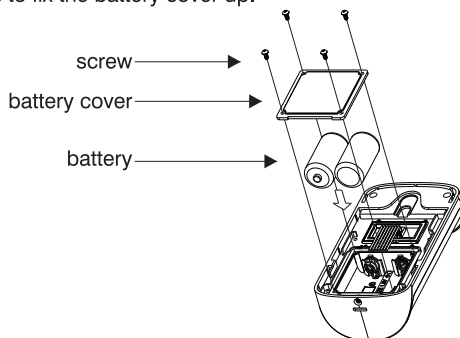

Installation Instruction

Indoor Handset

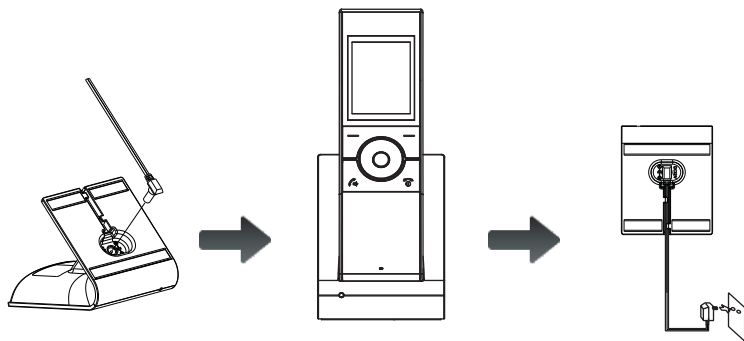



Connect the modular end of the AC power adapter to the power jack of the charger, then plug the AC adapter into a standard AC wall outlet.

Charging Indoor Handset

! Important Note: Before initial operation, **YOU SHOULD FULLY CHARGE THE INDOOR HANDSET** for about 5 hours.

To charge the indoor handset, you should place it on the charger base.


Diagram

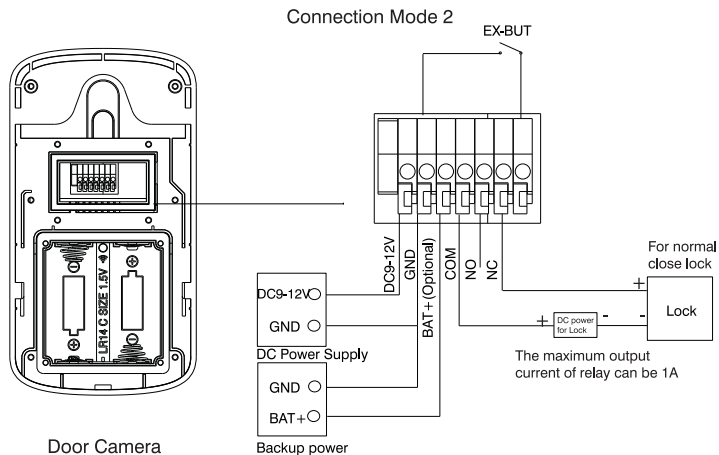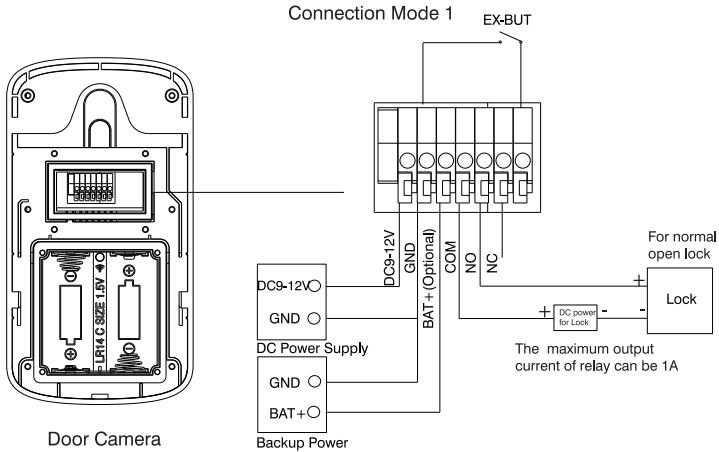


Note: The door camera may be powered with the batteries supplied or with a power supply (not included). Do not use batteries and power supply together at the same time. If the door camera is powered by power supply, the monitor feature is available. If the door camera is powered by batteries, the monitor feature is not available until the power mode is changed to power consumption mode (see page 17).

Door Camera

1. After wiring from the connection terminal, tense the cable. Drill the screws on the cable cover of the connection terminal.

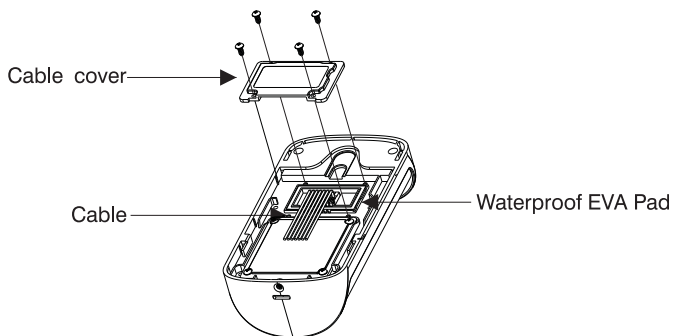

2. Choose a proper location for the door camera. Be sure to consider the average height of visitors. Drill screws to fix bracket in the wall. The door camera hang on the bracket. Drill screws to fix door camera and finish the installation.

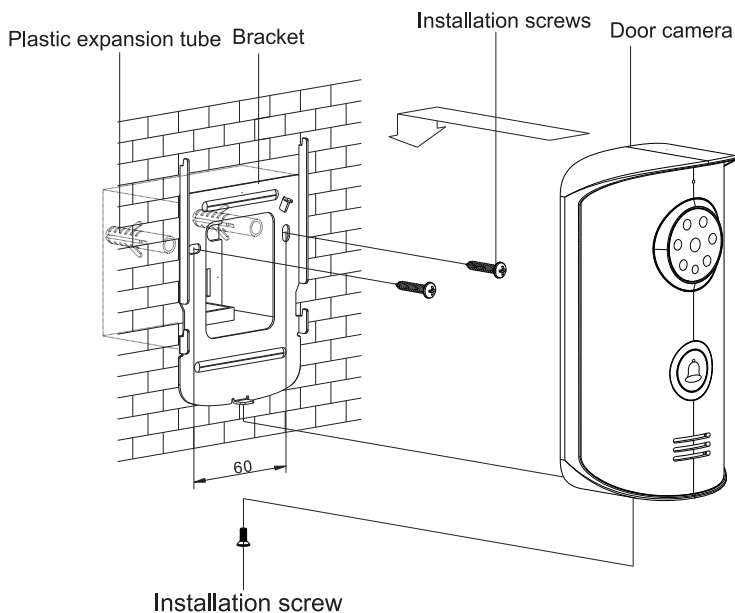

Settings

Turning On/ Off

To turn on the indoor handset, press and hold .


To turn off the indoor handset, press and hold .

Power on the indoor handset, the system will enter into the following interface:



Note: When the battery power of indoor handset is insufficient, it will display an indication icon  and warning tone. The indoor handset will automatically turn off. You need to charge it.

Press  to select the **Menu**, then the system will enter into the following interface:

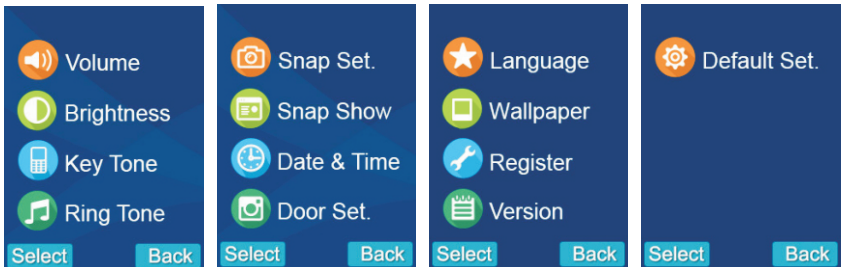

Chapter 1: Volume




This function allows you to adjust the volume (9 levels are adjustable) during a call.

1. Press **Up** (▲) or **Down** (▼) to choose "Volume" menu, then press (⊖) beneath **Select**.
2. Press **Up** (▲) or **Down** (▼) to choose talking volume(9 levels are adjustable), and press **Left** (◀) or **Right** (▶) to adjust.
3. Press **Up** (▲) or **Down** (▼) to choose ringtone volume(9 levels are adjustable), and press **Left** (◀) or **Right** (▶) to adjust.
4. If you want to set the ring time, you can press **Up** (▲) or **Down** (▼) to choose Ring Time(1-30 seconds are selectable), and press **Left** (◀) or **Right** (▶) to adjust.
5. When setting Ringing Time at 0s, indoor handset is on mute mode.
6. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

Note: Also, you can use **Left** (◀) or **Right** (▶) key to adjust the ringtone volume in the standby mode.

Chapter 2: Brightness

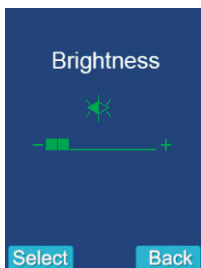


This function allows you to adjust the brightness (9 levels are adjustable).

1. Press **Up** (▲) or **Down** (▼) to choose "Brightness" menu, then press (⊖) beneath **Select**.

2. Press **Left** (←) or **Right** (→) to select the light level that you like. Each time you press **Left** (←) or **Right** (→), the indoor handset displays with the selected light level .
3. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

***Note:** Also, you can use **Up** (↑) or **Down** (↓) key to adjust the brightness in the standby mode.*

Chapter 3: Key Tone

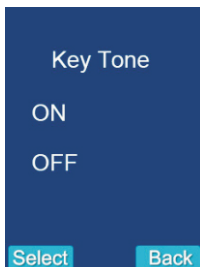

Every time you press a key, your indoor handset acknowledges it with a key tone. You can disable the key tones. In certain error conditions, there will be a warning tone when an incorrect key is pressed.

1. Press **Up** (↑) or **Down** (↓) to choose “Key Tone” menu, then press (⊖) beneath **Select** .
2. Press **Up** (↑) or **Down** (↓) to choose **On** or **Off** to enable or disable the function.
3. Press (⊖) beneath **Select** to save the settings and return to the previous menu.


Chapter 4: Ring Tone



This function allows you to change the ring tone of indoor handset (There are three ring tones for your selection).

1. Press **Up** (▲) or **Down** (▼) to choose “Ring Tone” menu, then press (⊖) beneath **Select**.
2. Press **Up** (▲) or **Down** (▼) to select the ring tone that you like. Each time you press **Up** (▲) or **Down** (▼), the indoor handset sounds with the selected volume.
3. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

Chapter 5: Snap Set.

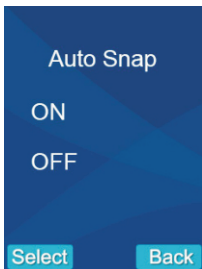

1. Press **Up** (▲) or **Down** (▼) to choose “Snap Set.” menu, then press (⊖) beneath **Select**.
2. Press **Up** (▲) or **Down** (▼) to choose **On** or **Off** to enable or disable the function.
3. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

With this **Auto Snap On**, the camera will take a photo of visitor automatically when visitors press the **Call** button on the door camera. You can pick up this photo easily in the indoor handset.

Notes:

1. During a conversation the camera can take a photo of visitor if you press the **Snap** key and save it into the indoor handset.
2. During a monitoring, the camera can take a photo of the view if you press the **Snap** key and save it into the indoor handset.
3. Up to 100 photos can be stored in the handset. The previous ones will be removed automatically if the photos are exceeding 100 pieces in the indoor handset.


Chapter 6: Snap Show



You can review or delete the recorded photos under this menu. The door camera's number will also be displayed on the upper left of photo correspondingly.

1. Press **Up** (▲) or **Down** (▼) to choose "Snap Show" menu.
2. Press (⊖) beneath **Select**, press **Left** (◀) or **Right** (▶) to review pictures.
3. If you want to delete the photo, use **Left** (◀) or **Right** (▶) to choose the photo , then press the (⊖) beneath " 🗑️ ", The display will show 🗑️ ? ", press (⊖) beneath " ✓ " to confirm.
4. After one warning tone, it will display the next photo.
5. Press (⊖) beneath ⏮ to return to the previous menu.

Chapter 7: Date&Time

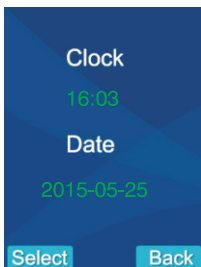


1. Press **Up** (▲) or **Down** (▼) to choose “Date&Time” menu, then press (⊖) beneath **Select**.
2. If you want to set the time, you can press **Left** (◀) or **Right** (▶) to choose the Hour or the Minute and press the **Up** (▲) or **Down** (▼) to adjust.
3. If you want to select the date, you can press **Left** (◀) or **Right** (▶) to choose the Year or the Month or the Date, and press the **Up** (▲) or **Down** (▼) to adjust.
4. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

Notes:

1. The time format adopt 24-hour time system and the date format is YYYY-MM-DD.
2. The Date & Time must be set in advance to ensure that the time displayed on the indoor handset's pictures are correct.
3. When you replace battery, you must set the time and the date again.
4. The Date & Time setting order is Hour-Minute-Year-Month-Date.

Chapter 8: Door Set.

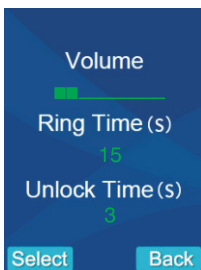


1. Press **Up** (▲) or **Down** (▼) to choose “Door Set.” menu, then press (⊖) beneath **Select**.
2. If you want to adjust the volume of door camera, you can press **Up** (▲) or **Down** (▼) to choose volume(9 levels are adjustable), and press **Left** (◀) or **Right** (▶) to adjust.
3. If you want to set the ring time, you can press **Up** (▲) or **Down** (▼) to choose Ring Time(1-15 seconds are selectable), and press **Left** (◀) or **Right** (▶) to adjust.

4. If you want to set the unlock time, you can press **Up** (▲) or **Down** (▼) to choose Unlock Time(1-9 seconds are selectable), and press **Left** (◀) or **Right** (▶) to adjust.
5. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

***Note:** When there are two indoor handsets connected to one door camera, the setting of these two indoor handsets should be the same.*

Chapter 9: Language

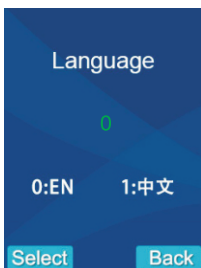


1. Press **Up** (▲) or **Down** (▼) to choose “Language” menu, then press (⊖) beneath **Select**.
2. Press **Up** (▲) or **Down** (▼) to choose the corresponding language(0 stands for English,1 stands for Chinese)
3. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

Chapter 10: Wallpaper




You can choose different wallpaper.

Chapter 11: Version

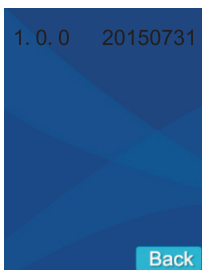

Press **Up** (▲) or **Down** (▼) to choose “Version” menu, then press (⊖) beneath **Select**. You can check the software version in it.

Chapter 12: Default set.

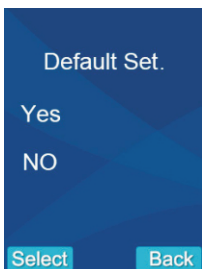

This function allows you to reset the indoor handset to the factory default.

1. Press **Up** (▲) or **Down** (▼) to choose “Default Set.” menu, then press (⊖) beneath **Select**.
2. Press **Up** (▲) or **Down** (▼) to choose **YES** or **NO** to enable or disable the function.
3. Press (⊖) beneath **Select** to save the settings and return to the previous menu.

Result: After resetting , the indoor handset will return to standby mode.


Note: If you reset the indoor handset to the factory default, all of settings will be return to the factory default.

Engineering Mode


Register

1. Firstly, insert the small screw driver on “” position inside the battery case of door camera for 3 seconds. It sounds an indication tone and the backlight of call button will lighten.

Secondly, press  beneath **Menu** on the indoor handset, then select the **Register** menu, press **Up**  or **Down**  to choose one door camera (1-2 are selectable) that you want to connect , and press  beneath “” to confirm the setting, then the door camera will auto search the indoor handset which need to register. When the indoor handset sounds an indication tone, it means that it is registered successfully.

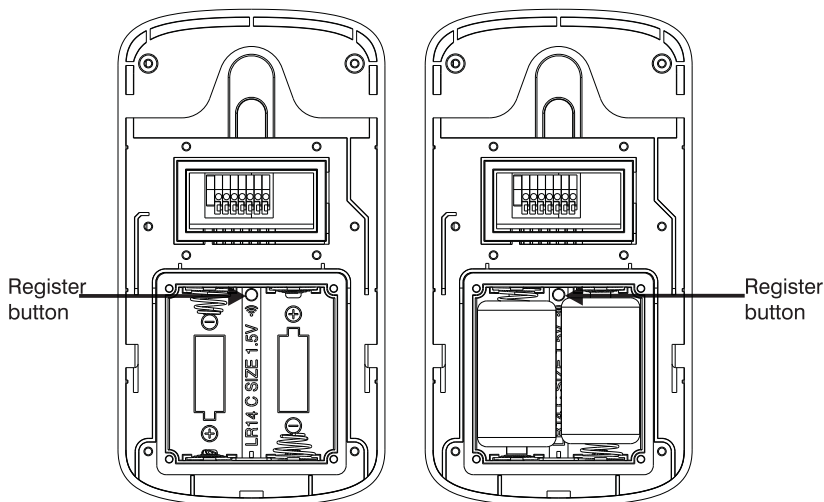

2. Press  beneath the **Menu**, then select the **Register** menu, the system will enter into the following interface, it indicate that the door camera has registered the indoor handset successfully.

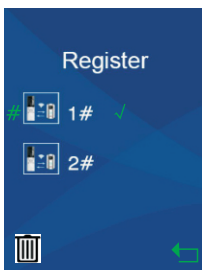

3. If you want to delete the registration, you can press ⊖ beneath 🗑️. The display will show" 🗑️ ?", press ⊖ beneath ✓ to confirm. Press ⊖ beneath ⬅️ to return to the main interface.

Notes:

1. The registration of door camera can be up to 60 seconds.
2. The registration of indoor handset can be up to 20 seconds.
3. The product can support max. 2 door cameras and 2 indoor handsets.

Power Saving Mode

1. If the door camera is supplied by battery, the indoor handset can not support monitoring feature with factory default. Press register button for 3 seconds and make the door camera under registered status, press register button for 3 seconds again, and it sounds "bi-bi-bi"tone. The door camera will change power saving mode into the power consumption mode. The monitoring feature can be available for the indoor handset while door camera supplied by battery.
2. Under registered status, press register button for 3 seconds, and it sounds "bi"tone. The door camera change power consumption mode into power saving mode. The monitoring feature is unavailable.

Operations

Monitor

About the monitor function , the LCD will automatically display the corresponding menu according to the registered door camera.

1. In the standby mode, press  beneath **Mon.**
2. When registers one door camera, the indoor handset will directly enter into monitor mode.
3. When registers two door cameras, the LCD will display 1#, 2# Monitor ,and you can press **Up**  or **Down**  to choose the monitor which you need, then press  beneath **Select.**
4. In monitoring mode, press **Accept** key enter into intercom communication.

***Note:** The monitor time can be up to 45 seconds.*

Alarm

When someone takes the door camera apart from the bracket , the door camera and indoor handset will sound an alarm tone, the call button is invalid on the door camera, press  or  to stop alarm sounds.

***Note:** The alarm time can be up to 5 minutes.*

Calling indoor handset

If the visitor press the **Call** button on the door camera, the corresponding indoor handset rings, and the image of the visitor appears on the LCD of the indoor handset, press the **Call** button again to end the conversation.

1. If the household does not want to answer, press  to cancel the call.
2. After the household press , the indoor handset will stop ringing. Then the conversation starts. Press  or **Call** button to end the conversation.

Notes:

1. The ringing time can be up to 30 seconds.
2. The conversation can be up to 45 seconds. After 45 seconds, the call will be disconnected automatically.

Unlocking

During conversation or monitor status, press  button to unlock the door.

Backlight

1. If the door camera is supplied by DC 12V, the backlight of call button is lighted.
2. If the door camera is supplied by battery, the backlight of call button will turn off.
3. In the registering, calling, alarm, monitoring and intercom status, the backlight will flash.

***Note:** During call, alarm and monitor status, the door camera is supplied by battery and in power saving mode, the backlight of call button will turn off and not flash.*

Technical Parameters

Item	Detail
Door Camera	
Transmit Frequency Range	2.4GHz - 2.4835GHz
Data Rate	2.0Mbps
Transmitting Power	19dBm (TYP)
Modulation Type	GFSK
Transmitting Distance(in open area)	about 500m
Image Sensor Type	Color CMOS Image sensor
Image Processing	H.264
Camera Pixels	640*480
White Balance	Auto
Viewing Angle (Diagonal)	120°
LED	6 LEDs
Power Requirement	(+9V-12V)±5%/ 2*LR14(C),1.5V batteries
Power Consumption	500mA Max(Cells) 200mA Max(+ 12 V DC)
Operating Temperature	-20℃ ~ +55℃
Operating Humidity	20%-90%
Size(W*H*D)	86*160*55mm
No. of indoor handset supported	Max .2

Technical Parameters

Item	Detail
Indoor Handset	
Receiving Frequency Range	2.4GHz - 2.4835GHz
Monitor	2.4" Color LCD
Data Rate	2Mbps
Receiving sensitivity	-85dBm
Demodulation Type	GFSK
LCD Resolution	320X240(RGB)
Transmitting Power	19dBm (TYP)
Power Requirement	BL-5C, 3.7V , 1100mA(lithium battery)
Power Consumption	400mA Max
Operating Temperature	-10℃～+55℃
Operating Humidity	20%～90%
Size(W*H*D)	Indoor Monitor:52.7*188.2*26.3mm Charger base:80 * 95.2*103.7mm
No. of door camera supported	Max .2

Notes

Maintenance of devices

1. Keep the clearance of the surface and use soft dry cloth to clean the dust of the product.
2. Please turn off the power of indoor handset when clean the indoor handset.
3. If there is hard dirty which cannot be cleaned with dry cloth, please use the soft towel dipped in the neutral diluted detergent to clean the machine and then clear it with dry cloth.
4. Do not use benzene, thinner or organic solvents such as gasoline to clean, these solvents may cause damage to the machine casing or the surface of machine and change colors.

Matters need to be noticed

1. Read the instructions in this handbook carefully. Be sure to keep it for future reference.
2. Be sure to use only the power adapter and that your power source matches the rating listed for it. If you are not sure, check with your dealer or with your local power company.
3. Avoid strong hits or shocks. Do not use the power adapter if it has received any hard knocks or looks damaged in any way; immediately contact an authorised service center.
4. The product should be placed where is stable, windy, air-dry, non-sunshine, non strong magnetic and non dusty.
5. Don't clean the surface with chemicals but with soft and clean dry cloth.
6. Don't press several buttons at the same time.
7. The outdoor and indoor unit must be matched with appointed specified models and cannot match with others that are not our products.
8. Don't disassemble the machine without authorization, if the need for fault repair, please contact the distributors or the company's tech-supporting department.

